

**GAS COOKTOPS**  
**USE & CARE INFORMATION**

**GUÍA DE USO Y MANTENIMIENTO**

**GUIDE D'UTILISATION ET D'ENTRETIEN**

**INFORMAZIONI SU USO E MANUTENZIONE**

**WOLF®**



## CONTENTS

<b>Wolf Gas Cooktops</b>	<b>3</b>
<b>Safety Instructions and Precautions</b>	<b>4</b>
<b>Wolf Gas Cooktop Features</b>	<b>8</b>
<b>Wolf Gas Cooktop Use &amp; Care</b>	<b>10</b>
<b>Wolf Troubleshooting Guide</b>	<b>17</b>
<b>Wolf Service Information</b>	<b>18</b>

As you read this Use & Care Information, take particular note of the CAUTION and WARNING symbols when they appear. This information is important for safe and efficient use of the Wolf equipment.

### **⚠ CAUTION**

signals a situation where minor injury or product damage may occur if you do not follow instructions.

### **⚠ WARNING**

states a hazard that may cause serious injury or death if precautions are not followed.

In addition, this Use & Care Information may signal an IMPORTANT NOTE which highlights information that is especially important.

**THANK YOU**


Your purchase of a Wolf gas cooktop attests to the importance you place upon the quality and performance of your cooking equipment. We understand this importance and have designed and built your cooktop with quality materials and workmanship to give you years of dependable service.

We know you are eager to start cooking, but before you do, please take some time to read this Use & Care Information. Whether you are a beginning cook or an expert chef, it will be to your benefit to familiarize yourself with the safety practices, features, operation and care recommendations of the Wolf gas cooktop.

If service is necessary, refer to the model and serial number of the gas cooktop. Both numbers are listed on the product rating plate located on the underside of the cooktop. Refer to the illustration below.

**⚠ WARNING**

**This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance.**

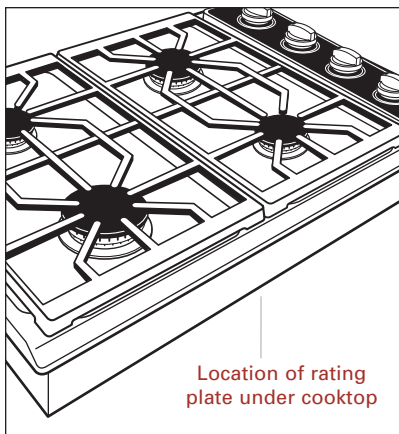

**Rating plate location**

**IMPORTANT NOTE:**

- Installation and service must be performed by a qualified installer, service agency or the gas supplier.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated; keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).
- Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.

**WHAT TO DO IF YOU SMELL GAS:**

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

**CONTACT INFORMATION**

**Website:**  
[wolfappliance.com](http://wolfappliance.com)

# SAFETY INSTRUCTIONS AND PRECAUTIONS




## WHAT TO DO

- **IMPORTANT NOTE: Read all instructions before using this appliance.**
- **Read this Use & Care Information carefully before using your new cooktop** to reduce the risk of fire, electric shock or injury to persons.
- **Ensure proper installation and servicing.** This appliance must be properly installed and grounded by a qualified technician. Learn how and where to turn off the gas to the cooktop.
- **Before performing any service, turn off the gas supply** and unplug the cooktop electrical power cord from the wall receptacle.
- **Keep igniters clean and dry** for proper lighting and performance of the burners.
- **In the event that a burner goes out and gas escapes, open a window or a door.** Wait at least five minutes before using the cooktop.
- **Adequate supply of air.** Your kitchen must provide an adequate supply of fresh air to ensure proper combustion and ventilation.
- **Start the ventilation hood** approximately five minutes before cooking on the cooktop; this establishes an air curtain, and improves the capture of vapor and moisture.
- **Wear proper apparel.** Never let loose clothing or other flammable materials come in contact with the burners while in operation. Fabric may ignite and cause personal injury.



## WHAT TO DO

- **Always use dry pot holders when removing pans from the cooktop.** Wet or damp pot holders can cause steam burns. Do not use a towel or bulky cloth in place of pot holders.
- **Choose pans with easily grasped handles** that will stay cool while cooking. Refer to Cookware Selection on page 14.
- **When cooking, set burner controls** so that the flame does not extend beyond the bottom of the pan.
- **Always turn panhandles inward** so they do not extend over adjacent work areas, burners or the edge of the cooktop.
- **Always check the positions of the control knobs** to make certain the cooktop is off when you are finished cooking.
- **When deep fat frying, be sure that the pan is large enough** to accommodate the desired volume of food without overflow caused by bubbling of the fat. Never leave a deep fat fryer unattended. Avoid deep fat frying of moist or frost-covered foods, as foods with high water content may cause spattering or spilling of the hot fat. Heat fat slowly, and stir together any combinations of oils and fats prior to applying heat. Use a deep fat frying thermometer to avoid heating the fat to temperatures above the flash point.
- **Always light each burner prior to placing a pan on the burner grate.** Also, turn the control knob to the  position before removing a pan from the burner grate.

# SAFETY INSTRUCTIONS AND PRECAUTIONS



## WHAT **NOT TO DO**

- **Do not repair or replace any part of the cooktop** unless specifically recommended in literature accompanying this appliance. All service should be referred to a qualified technician.
- **Do not obstruct the flow of combustion and ventilation air.**
- **Do not use aluminum foil** to line any part of the cooktop.
- **Never use the cooktop to warm or heat the room.**
- **Do not store flammable materials near burners** or let grease or other flammable substances accumulate on the cooktop.
- **Do not use abrasive or caustic cleaners** or detergents on this appliance as these may cause permanent damage. Do not use aerosol cleaners as these may be flammable or cause corrosion of metal parts.
- **Do not store or use gasoline** or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Keep appliance area clear** and free from combustible material.
- **Do not block or obstruct the holes in the cooktop surface** below the control knobs. Blocking these holes may affect burner operation and may result in a hazard.
- **When using the cooktop, do not touch the grates,** burner caps, burner bases or any other parts in proximity to the flame. These components may be hot enough to cause burns.
- **If the cooktop is near a window, do not use long curtains** as a window treatment, as they could blow over the cooktop and create a fire hazard.
- **Do not leave children alone or unattended** in the area where the cooktop is in use. Never allow children to sit or stand on the appliance. Do not let children play with the cooktop.
- **Do not store items of interest to children above or at the back of the cooktop,** as they could climb on the appliance to reach items and be injured.



## WHAT **NOT TO DO**

- **Do not use water on grease fires.** Smother the flame or use a dry chemical or foam-type extinguisher.
- **Never leave the appliance unattended when in use.** Boilovers and greasy spills may smoke or ignite.
- **Do not cover the burners and grates** with anything except properly selected utensils. Decorative covers should not be used.
- **Do not heat unopened food containers** such as baby food jars and cans. Pressure buildup may cause the container to burst and cause injury.
- **Do not clean the cooktop while it is still hot.** If using a damp sponge or cloth, wait until the cooktop has cooled sufficiently to prevent steam burns. Also, some cleaners can produce harmful or unpleasant fumes if applied to hot surfaces. Refer to Care Recommendations on page 15.

## **SAFETY** PRECAUTIONS

### **⚠ WARNING**


**TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A COOKTOP GREASE FIRE, OBSERVE THE FOLLOWING:**

**Smother flames with a close-fitting lid, baking sheet or other metal tray, then turn off the gas burner. Be careful to prevent burns. If the flames do not go out immediately, evacuate and call the fire department.**


**Do not use water on grease fires.**

**Never pick up a flaming pan—you may be burned.**


**GAS COOKTOP** FEATURES



**Model ICBCT15G**

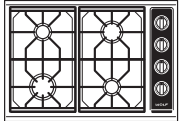

**Model ICBCT30G**

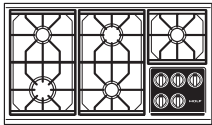

**Model ICBCT36G**

- Available in natural (I2H, I2E and I2E+) and LP (I3P) gas
- Stainless steel top construction
- Dual-stacked, sealed burners with automatic reignition on all settings
- Individual spark ignition system
- Illuminated control panel with two-tiered control knobs
- True Simmer setting on all burners
- Low-profile, cast iron continuous burner grates with matte porcelain finish
- Seamless drawn burner pan
- CE certified as a Class 3 appliance
- Certified for the following appliance category and adjusted to the gas type and pressure:
  - I3P – G31 at 37 mbar
  - I2E – G20 at 20 mbar
  - I2E+ – G20/25 at 20/25 mbar
  - I2H – G20 at 20 mbar

**381 mm GAS COOKTOP**


- One medium 3.8 kW (276 g/h) sealed burner with .2 kW (14.5 g/h) delivered at simmer
- One small 3.0 kW (218 g/h) sealed burner with .1 kW (7.3 g/h) delivered at simmer
- Gas rating: 6.8 kW (NAT) and 494 g/h (LP)

**762 mm GAS COOKTOP**

- One large 4.9 kW (356 g/h) sealed burner with .2 kW (14.5 g/h) delivered at simmer
- One medium 3.8 kW (276 g/h) sealed burner with .2 kW (14.5 g/h) delivered at simmer
- Two small 3.0 kW (218 g/h) sealed burners with .1 kW (7.3 g/h) delivered at simmer
- Gas rating: 14.7 kW (NAT) and 1069 g/h (LP)


**MODEL ICBCT15G**

**381 mm Gas Cooktop**

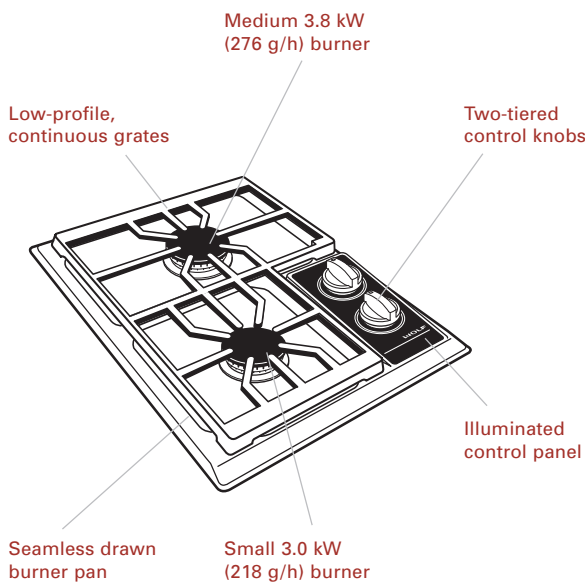

**MODEL ICBCT30G**

**762 mm Gas Cooktop**

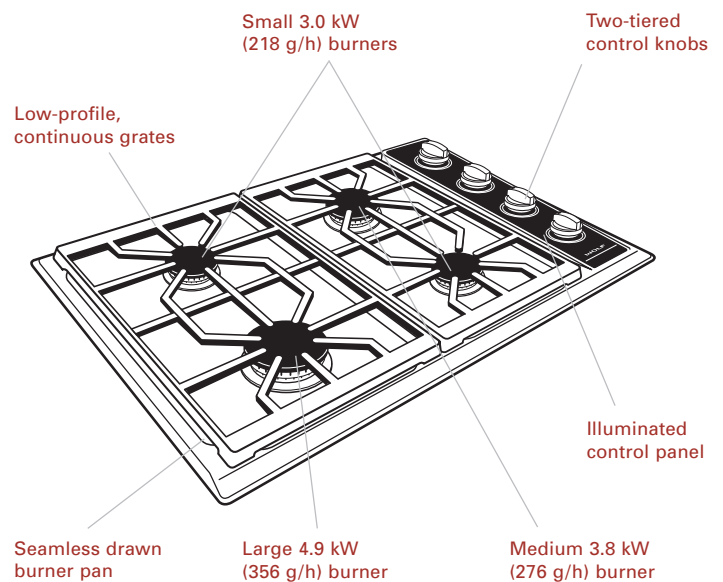



**GAS COOKTOP** FEATURES

**914 mm GAS COOKTOP**

- One large 4.9 kW (356 g/h) sealed burner with .2 kW (14.5 g/h) delivered at simmer
- One medium 3.8 kW (276 g/h) sealed burner with .2 kW (14.5 g/h) delivered at simmer
- Three small 3.0 kW (218 g/h) sealed burners with .1 kW (7.3 g/h) delivered at simmer
- Gas rating: 17.7 kW (NAT) and 1287 g/h (LP)

**GAS COOKTOP** ACCESSORIES

These optional accessories are available through your Wolf dealer.

- One-piece wok and single burner grate (Models ICBCT30G and ICBCT36G)
- Filler strip
- Bracket supports for installation of two integrated modules with a downdraft ventilation system (Model ICBCT15G)
- High altitude conversion kit

ACCESSORIES


**Optional accessories are available through your Wolf dealer.**



**These appliances are certified by Star-K to meet strict religious regulations in conjunction with specific instructions found on [www.star-k.org](http://www.star-k.org).**

**MODEL ICBCT36G**

**914 mm Gas Cooktop**

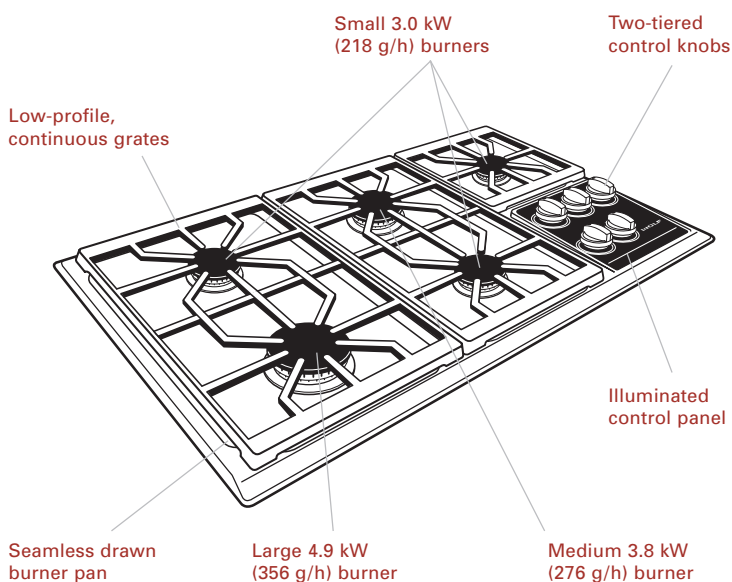

**ILLUMINATED CONTROL PANEL**

The control panel of your gas cooktop is illuminated for instant visual indication that any one or more burners are in use. It is a safety signal reminding you that a flame is on and active. The illustration below shows the control panel of the 914 mm gas cooktop.

**CONTROL KNOBS**

Each control knob is positioned to correspond to the burner regulated.

For the 381 mm and 914 mm cooktops, the knob on the lower left side regulates the lower left burner. Conversely, the knob on the upper right side regulates the upper right burner. The illustration below shows the configuration of the control knobs for the 914 mm gas cooktop.



Each knob on the 762 mm cooktop control panel has a diagram above it. The diagram shows which burner it regulates.

It is normal for the knobs to be slightly raised above the surface. This space is an air inlet necessary for good combustion of gas. Each knob rests on a valve stem with a rubber grommet at the base. This design prevents liquid spills from dripping into the controls below the burners.

**CONTINUOUS GRATES**

The continuous low-profile cast iron grates of your gas cooktop are designed for a close fit. This enables you to move pans easily from one burner to another without having to lift the pan or have it tip over between the grates. Each grate sets securely on dimples on each corner of the burner pan. Refer to the illustration below.

For the 762 mm and 914 mm gas cooktops, the continuous grates are interchangeable with each other, with the exception of the single grate on the 914 mm cooktop.

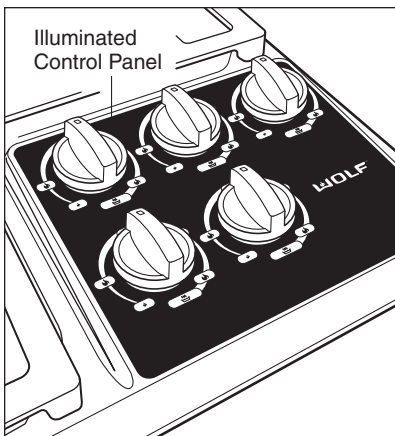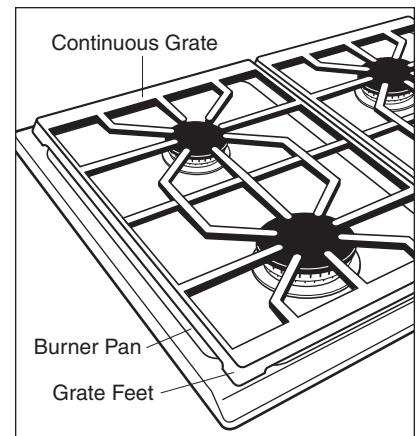**Control panel for Model ICBCT36G****Continuous grates**

**SURFACE** BURNERS

A spark electrode ignites each surface burner. This control eliminates the need for continuous open flame pilots. For added safety and convenience, each burner is designed with an electronic reignition system. This feature enables any burner to relight automatically in the event it is accidentally extinguished.

A distinguishing feature of Wolf's low kW control is its constant, low heat output without continuous ignitions. The flame diameter remains full size; only the heat output is lowered. This patented dual-stacked burner design makes it possible to enjoy cooking at full flame as well as maintain control while simmering at the lowest flame setting.

**DUAL-STACKED BURNER ASSEMBLY**


The unique dual-stacked burner design of your gas cooktop combines all of the burner parts in one assembly.

After cleaning or removing burner parts for any reason, it is extremely important that you reassemble burners correctly.

The burner cap has a groove in the bottom, which allows the cap to fall into place when moved around the top of the burner. The cap should be flat relative to the burner when in the proper orientation. Failure to do this will result in a poor flame. Refer to the illustration below.

**⚠ CAUTION**

**Failure to position the burner parts correctly could cause flames or gas to escape, causing heat damage to your cooktop, or burn between parts, resulting in poor combustion.**

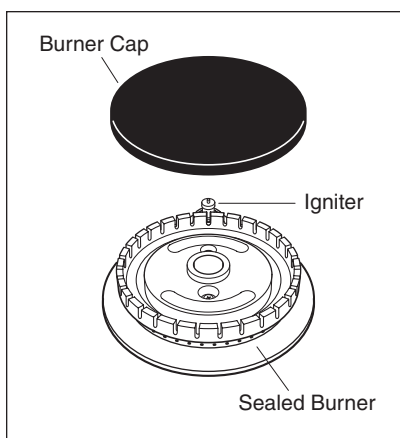




**Dual-stacked burner assembly**




**BEFORE USING** YOUR COOKTOP




Before using for the first time, you should clean your gas cooktop thoroughly with hot water and a mild detergent. Rinse and dry with a soft cloth. This removes any residual oil and grease left on the surface from the manufacturing process. Apply a stainless steel polish to protect the finish and add luster. Refer to Care Recommendations on page 15.

**IMPORTANT NOTE:** Before using your gas cooktop, check that the surface burner caps are positioned correctly.


**CONTROL KNOB** OPERATION


Each burner has full flame and full simmer capabilities. Knobs are designed as two-tiered “push-to-turn” knobs. One tier is used for  through  flame settings; the second tier controls  settings. Refer to the illustration below. Although this is a child-safe design, children should never be left unattended in the kitchen when the cooktop is in use.

To light a burner, push down and turn the corresponding control knob counterclockwise to the  setting. You will hear a clicking sound and see the burner ignite. Once the burner is lit, continue turning the knob counterclockwise to any one of the settings— through .

To select a **SIMMER** setting, turn the burner knob to the  setting; you will feel a stop detent in the knob rotation. Push down on the knob, continuing to turn it counterclockwise. This moves it to the second tier. Now, select any variation within the **SIMMER** flame settings— through .

**⚠ CAUTION**

**Never leave pans on a  setting unattended. Be particularly cautious when cooking food in fat or grease. It can become hot enough to ignite.**

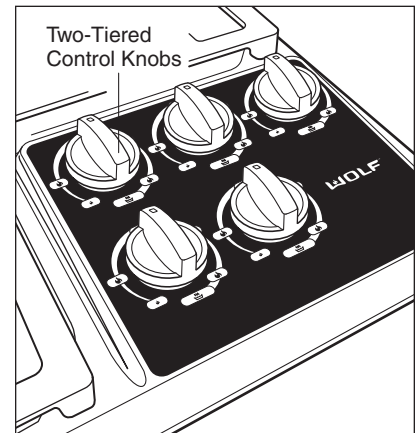


**Two-tier burner control knobs**



## **FLAME HEIGHT** AND APPEARANCE

Select a flame that is just high enough to maintain the desired cooking speed and is sized to fit the base diameter of the pan. Never extend the flame beyond the base of the pan.

The flame on natural gas should be blue with a deeper blue core. There should be minimal trace of a yellow flame. A yellow flame indicates an improper mixture of air and gas or impurities in the gas supply to the range. If this occurs consistently, call a Wolf authorized service center to adjust the mixture. With LP gas, some yellow tipping to the flame is acceptable and may not require an adjustment. Refer to the illustration below.

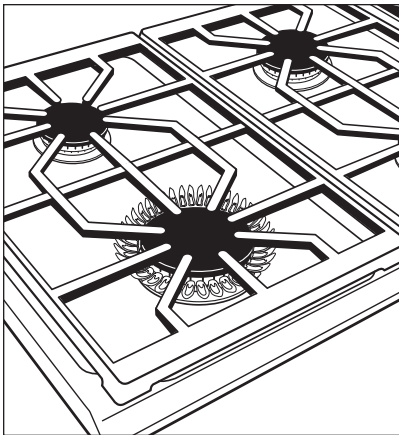

Large burner on  setting




## COOKWARE SELECTION

For best results, we recommend medium- to heavy-weight pans that have a flat base, metal handle and a good-fitting cover.

Look for pans that are made of materials with good heat conductivity, such as aluminum and copper. These metals are sometimes found "sandwiched" between the inner and outer layers of the pan. If present, whether visible from the outside or not, they aid in evenly conducting heat.

Use the following guidelines when selecting cookware:

- Griddles or open roasters that span two burners are suitable, providing they are not warped.
- When a large pan is centered over a burner, the diameter should not exceed 254 mm.
- When using pans made of cast iron, enameled steel or glass ceramic, or coated with a nonstick finish, select lower flame settings. High heat applied to such materials will cause "hot spots," scorching and burning.
- Cover pans while cooking; covers improve cooking efficiency. Water boils faster, using less fuel, and the kitchen stays cooler.
- Select high-sided (deep) pans rather than ones with very wide bases and low sides. High sides will minimize liquids boiling over the pan.
- Pans with oversize bases that extend beyond the cooktop frame **should not** be used. On  settings, heat may be trapped beneath the pan, causing permanent damage to the surface finish.
- Use the front burners for larger pans. The pans are easier to handle, especially when hot.
- Use a wok with a flat bottom.



## CARE RECOMMENDATIONS

COMPONENT	CARE RECOMMENDATION
<b>Exterior Surface Stainless steel</b>	<b>CAUTION:</b> Make sure the gas cooktop is off and all surfaces are cool before cleaning any part of the cooktop.
<b>Burner Pan Stainless steel</b>	<p>Although stainless steel is resistant to most stains, it is not totally impervious to damage. Salt and some cooking liquids may pit and stain the surface. Always remove these spills immediately.</p> <p><b>General care:</b> Use a clean cloth or sponge; wipe with warm water and a mild dish detergent. Rinse and dry immediately.</p> <p><b>Exterior finish:</b> To clean the exterior of a classic or platinum stainless steel model, use a soft, nonabrasive stainless steel cleaner and apply with a soft, lint-free cloth.</p> <p><b>Spray degreasers:</b> Spray on a cloth and wipe surface to remove fingerprints and greasy spatters. Buff dry immediately to avoid streaking.</p> <p><b>Hard water stains:</b> Use white vinegar and water.</p> <p>Do not use abrasive cleaners; they will permanently scratch the surface. Do not use steel wool pads.</p>
<b>Burner Cap Porcelain enamel</b>	<p>Cool first. Wash in warm water and liquid detergent or mild abrasive cleaner.</p> <p>Foods high in acid or sugar content, such as milk, tomatoes, sauerkraut, fruit juices or pie filling, may pit or craze the surface. Remove as soon as possible before heating again.</p> <p>Never wipe a warm or hot porcelain surface with a damp sponge; it may cause chipping or crazing (tiny hairlike cracks).</p>
<b>Burner Grates Porcelain-coated cast iron</b>	<p>Remove from cooktop and place on a flat surface near the sink to clean.</p> <p><b>Nonabrasive cleaners:</b> Hot water and liquid detergent or a paste of baking soda and water; use a plastic pad or sponge.</p> <p><b>Mild abrasive and abrasive cleaners:</b> Use sparingly.</p>
<b>Control Knobs Chrome-plated</b>	<p>To remove, slip the edge of a dish towel under the knob; pull edges together. Using the towel for leverage, lift up, pulling the knob off the valve stem.</p> <p><b>General care:</b> Wipe each knob with damp cloth and mild soap and water; rinse and dry. Never soak or use abrasive cleaners; they will scratch the finish and remove the markings.</p>
<b>Control Panel Tempered glass</b>	<b>Spray cleaners:</b> Removes fingerprints and greasy food soils. Spray first on a cloth before wiping panel.
<b>Spark Igniters Ceramic</b>	Keep dry; never spray water or cleaner directly on the igniter. When cleaning around the surface burner, be careful that the cloth does not catch on the igniter and damage it.



## **COOKTOP** CLEANING TIPS

- Wait until surfaces are cool before cleaning.
- For best results, wipe up spills and splatters as they occur and immediately after the cooktop has cooled. If splatters are allowed to cook on, they may permanently damage or stain the finish.
- If in doubt about using one of your cleaners, check the label. To check if it is safe to use on your cooktop, try a small amount on an inconspicuous area using very light pressure.
- Use caution when spraying cleaners. Some contain caustic ingredients that can damage adjacent parts and finishes. Protect the adjacent parts by masking them off so that the overspray is contained to the finish being cleaned.
- Do not spray cleaners on electrical controls, igniters, wires or knob valve stems.


## **STAINLESS STEEL FINISH**

- For the stainless steel exterior finish, use a soft, nonabrasive stainless steel cleaner and apply with a soft lint-free cloth.
- To bring out the natural luster of both finishes, lightly wipe the surface with a water-dampened microfiber cloth, followed with a dry microfiber cloth. All work should follow the grain direction of the finish. Better results are obtained by keeping the cloth in continuous contact with the metal.
- Under no circumstances should you use a metallic or highly abrasive cleaner or cloth, as this will permanently scratch the surface.

### **⚠ WARNING**

**DO NOT use abrasive cleaners on your cooktop; they will permanently scratch the surface.**

**TROUBLESHOOTING** GUIDE

<b>PROBLEM</b>	<b>POSSIBLE SOLUTION</b>
<b>Burner flame does not burn evenly</b>	Reposition the burner cap of the stacked sealed burner assembly as described on page 11.
<b>Food boils or burns in one area of the pan and not the other</b>	Placement of pan on the grate is not centered above the burner. Pan material does not conduct heat evenly. Base of pan is warped and does not rest flat on the grate or handle of pan is too heavy and tips pan toward handle. Countertop or cooktop cabinet is not level.
<b>Burner fails to ignite</b>	Ceramic igniter is damp from a spillover or spray cleaner. Allow ceramic to dry out completely. Burner head ports are blocked. Use a straightened, metal paper clip to open the blockage. If a GFCI circuit is used, check to see if it has been tripped.
<b>Burners extinguish themselves when using more than one large roaster or griddle simultaneously</b>	Good gas combustion requires the correct amount of airflow to maintain the flame. Using two oversize pans simultaneously restricts air movement.
<b>Food boils out of the pan and overflows into the burner pan</b>	Heat setting is too high or pan size is too small for its contents.
<b>Water does not come to a boil fast enough</b>	Water temperature is colder than usual. Cover pan for most efficient use of the  setting. Diameter of pan is too large or base of pan is warped.
<b>Food cooks too slowly when sautéing</b>	Too much food is added at one time; reduce amount of food and sauté in batches. Size of food pieces is too large or temperature of food is colder than usual. Pan does not conduct heat evenly.
<b>Simmer setting does not maintain constant surface bubbles</b>	Delicate foods may need a lower simmer setting so that scorching does not occur.

CONTACT  
INFORMATION**Website:**  
[wolfappliance.com](http://wolfappliance.com)**SERVICE** INFORMATION

When requesting information, literature, replacement parts or service, always refer to the model and serial number of your cooktop. Both numbers are listed on the product rating plate located on the underside of the cooktop. Refer to the illustration on page 3. Record the rating plate information below for future reference.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Installation Date \_\_\_\_\_

Wolf Dealer and Phone  
\_\_\_\_\_**BEFORE CALLING FOR SERVICE**

Before calling your Wolf dealer or regional distributor, refer to the Troubleshooting Guide on page 17. Check the household fuse or circuit breaker to see if it has been blown or tripped and that the electrical connection to the appliance has not been disconnected. A power outage may also have caused a disruption in service.

The information and images in this book are the copyright property of Wolf Appliance, Inc., an affiliate of Sub-Zero, Inc. Neither this book nor any information or images contained herein may be copied or used in whole or in part without the express written permission of Wolf Appliance, Inc., an affiliate of Sub-Zero, Inc.

©Wolf Appliance, Inc. all rights reserved.

WOLF APPLIANCE, INC.  
PO BOX 44848  
MADISON, WI 53744 USA  
WOLFAPPLIANCE.COM

810126 11/2007



**WOLF**<sup>®</sup>